

 
'LDS'

Local Disconnect Switch




SonicAire

FRONT VIEW

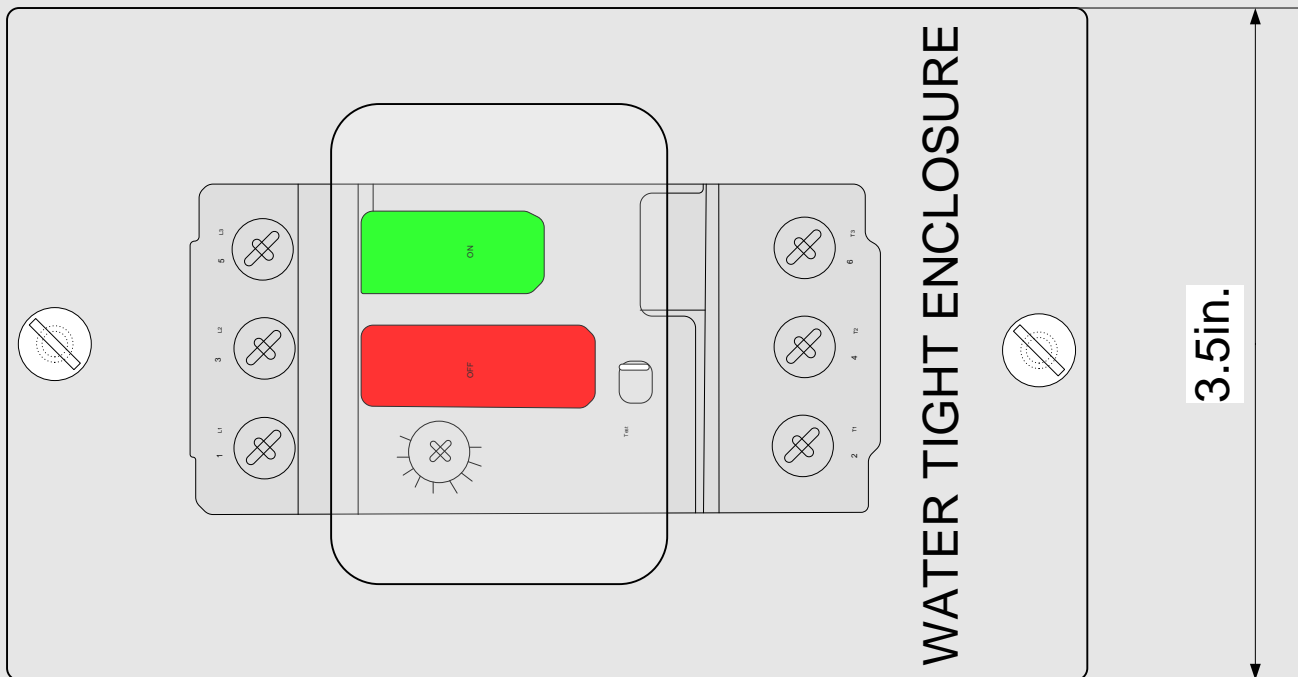


SIDE VIEW

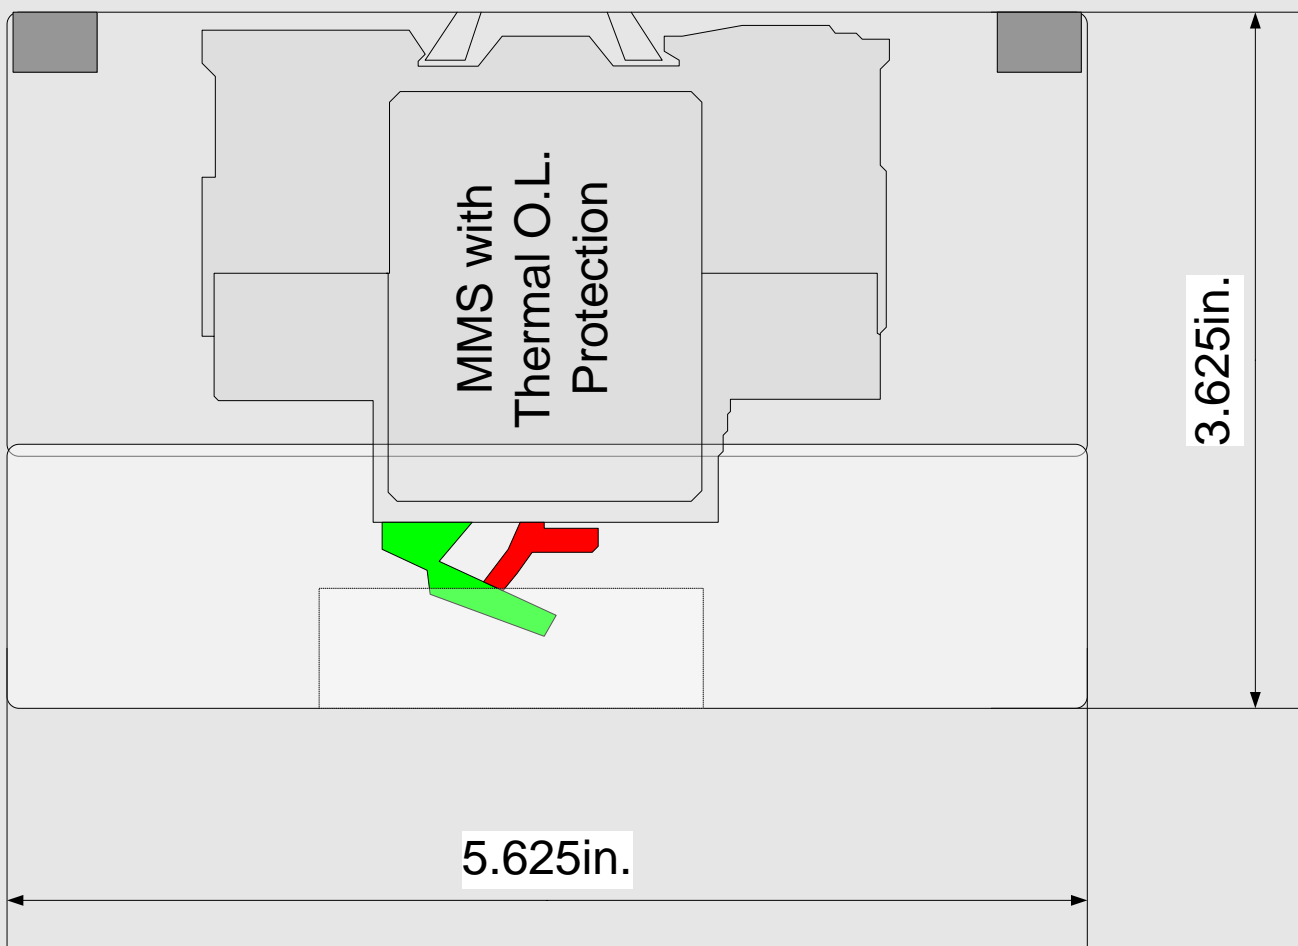

TYPICAL INSTALLATION VIEW

Voltage	Run Amps	IES Model#	Amp Range	Setting
600	1.3	LDS-460.600	1.0-1.6	1.3
460	1.6	LDS-460.600	1.0-1.6	1.6
380	2.0	LDS-380	1.6-2.5	2.0
230	3.2	LDS-208.230	2.5-4.0	3.3
208	3.6	LDS-208.230	2.5-4.0	3.6


The LDS uses a manual motor starter to provide circuit protection for each SonicAire fan. The MMS is housed in a dust tight enclosure with an E-Stop switch for emergency shut off and maintenance. With the LDS each SonicAire is electrically protected (short circuit and overload protection) and isolated.

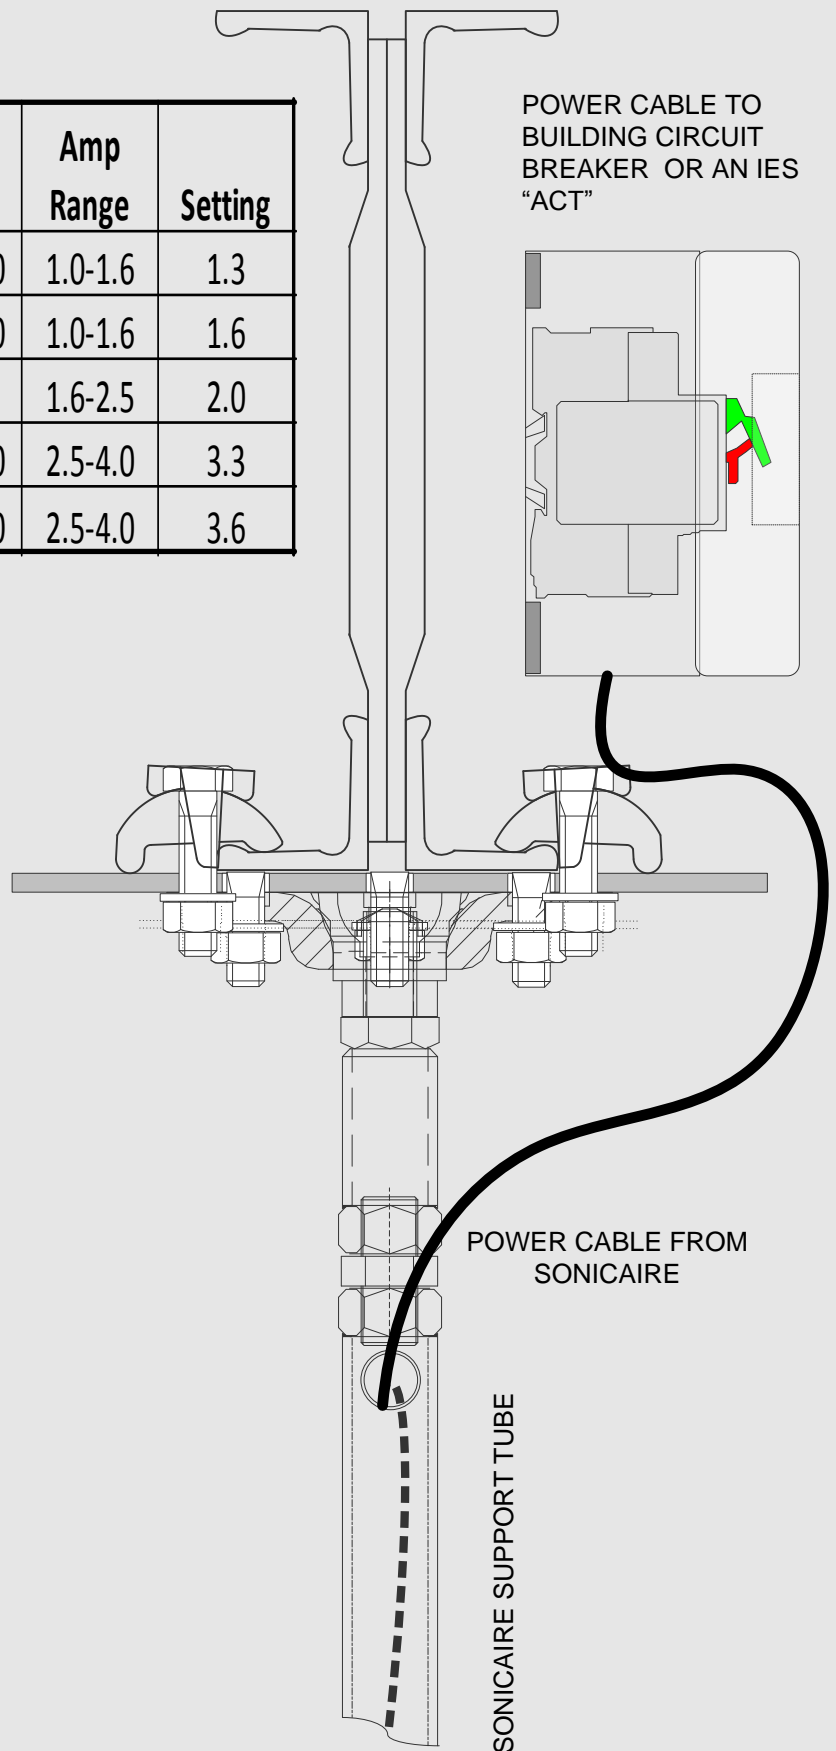



INTEGRATED
ENVIRONMENTAL
SOLUTIONS

Clean just got cool.™

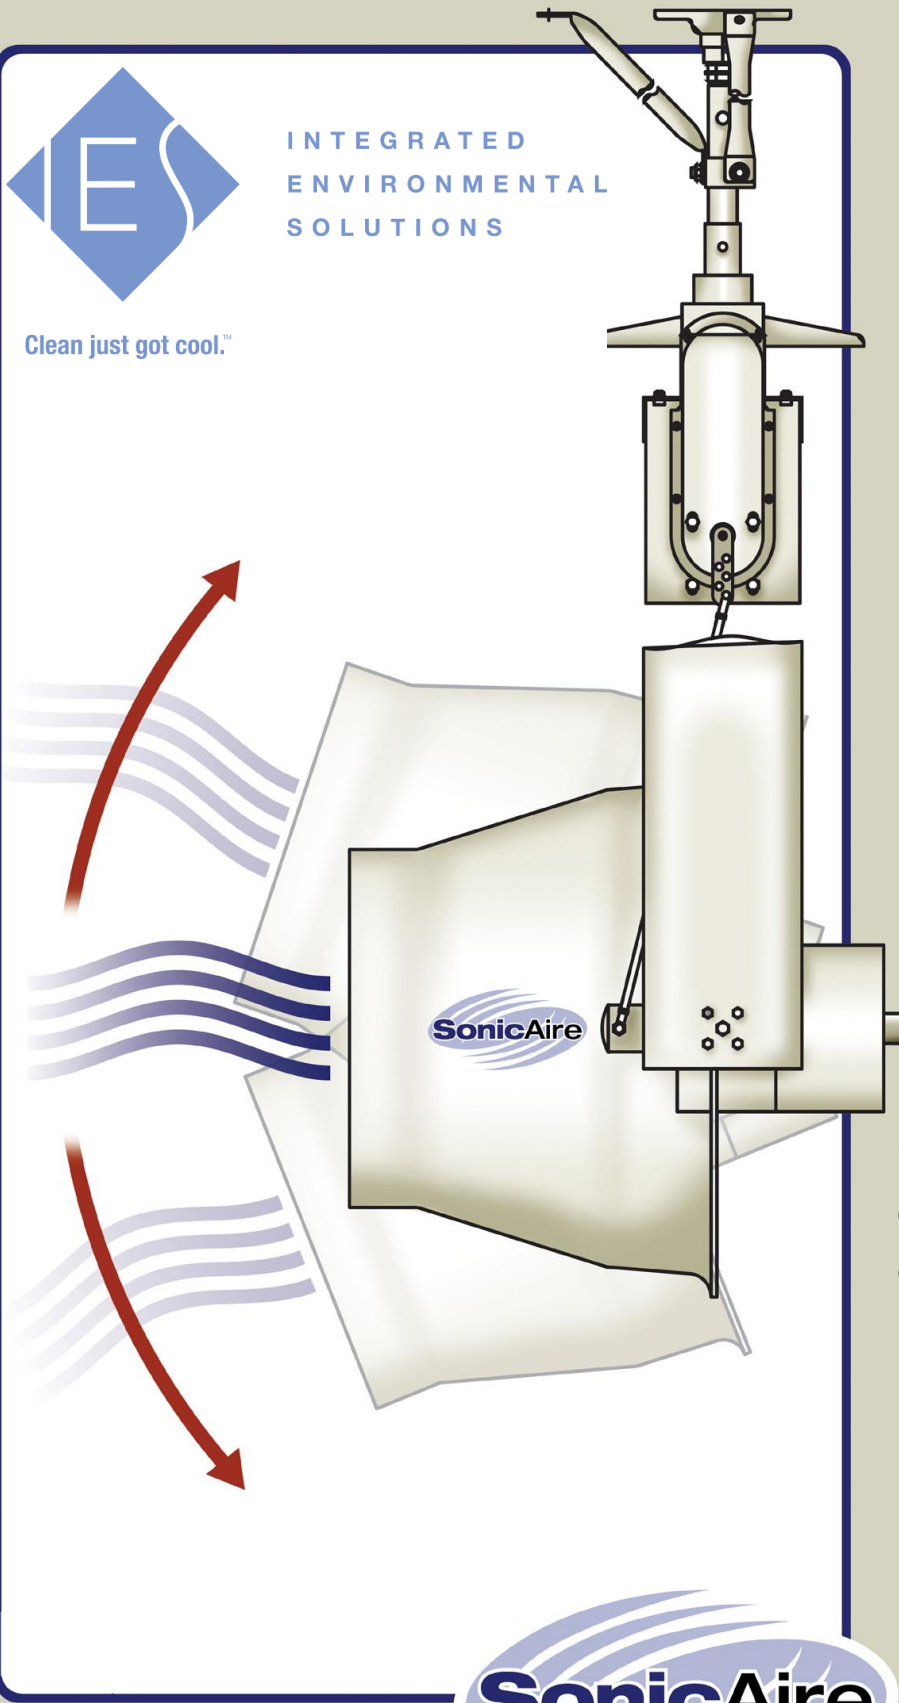

6220 Hacker Bend Ct., Ste. F
Winston-Salem, NC 27103
Ph: 336-712-2437
Fax: 810-454-0452
Sales@IESclean.com
www.IESclean.com

SonicAire

Changes in the design, materials and specifications may be made without notice to customers.