

How to set up SSA-T



SonicAire

How to unpack and set up the SSA-T



The SSA-T is crated resting on its back. This enables the center of gravity to be lowered for a more stable shipping platform. Follow the steps below to uncrate and set up your Tilting SuperSonicAire SSA-T.

NOTICE: ALWAYS INSPECT EQUIPMENT BEFORE SIGNING FOR SHIPMENT.



Remove side slates from base pallet.

Remove all tie down straps from equipment to pallet.

Remove control panel box and fan inlet guard.


Tilt front wheels on cart down to ground



Rotate pallet up until back casters are on the ground.



Attach control panel to handle bar with (2) bolts.

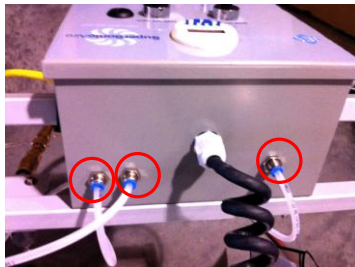

Connect (3) 1/4" pneumatic tubing to control panel. Push tubing fully into fittings.



Align flat on male and flat on female circular connector parts before screwing two parts together.



Attach actuator power cable to frame with cable guide.

Attach actuator power cable from control panel to actuator with circular connector.



Attach spiral power cable circular connector from control panel to SuperSonicAire fan hub.

Connect plant air to PRV




Plug in power cord to 110V outlet





INTEGRATED
ENVIRONMENTAL
SOLUTIONS

Clean just got cool.™

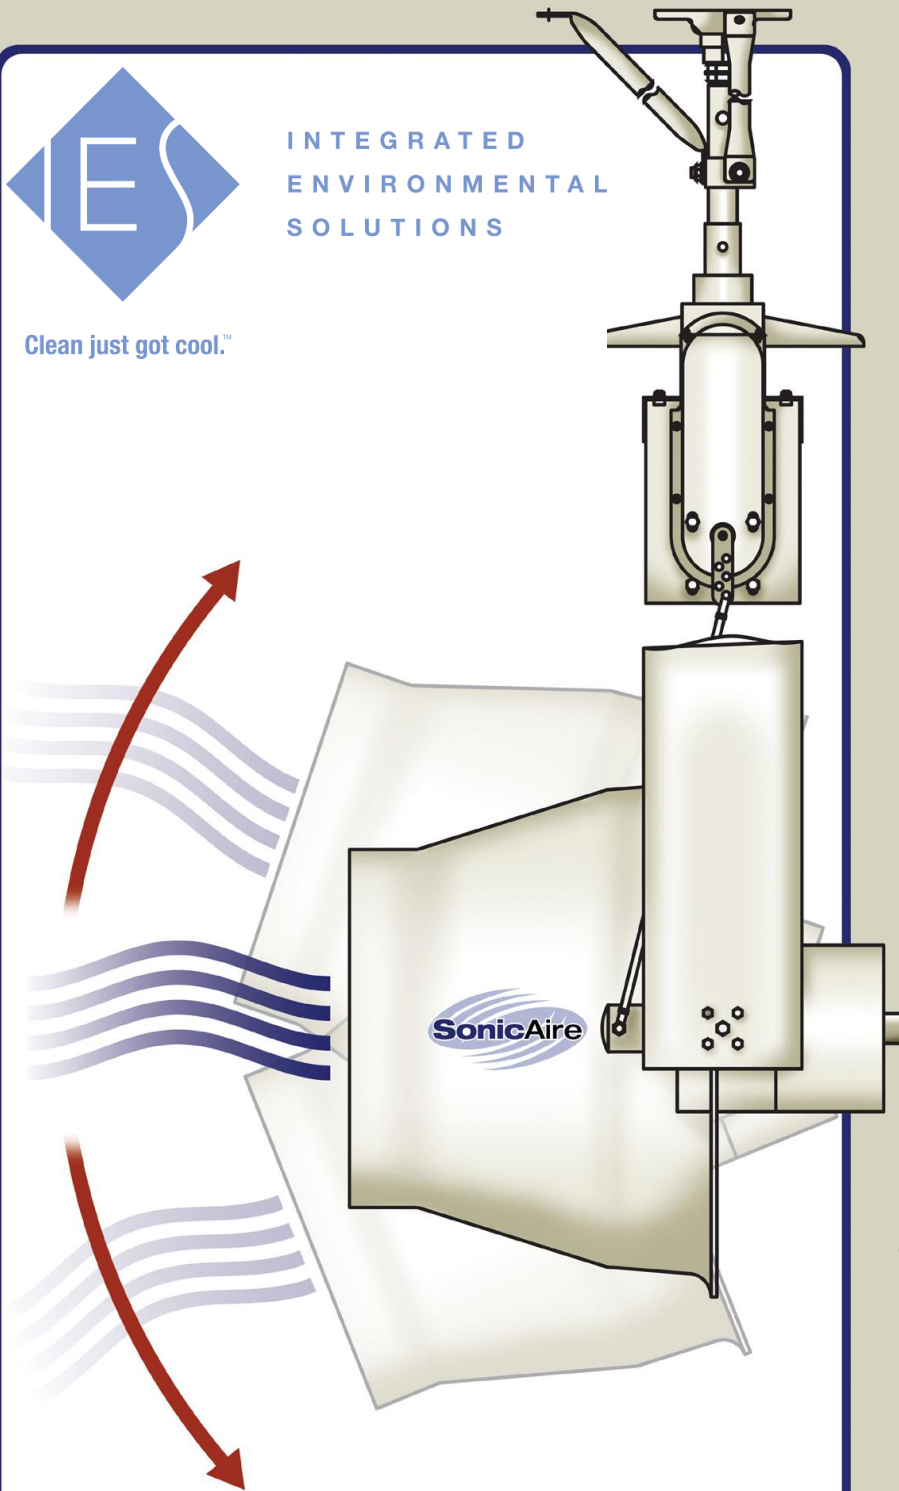

691 Blue Rock Ct.
Winston-Salem, NC 27103
Ph: 336-712-2437
Fax: 810-454-0452
Email: Sales@IESclean.com
Website: www.IESclean.com



Changes in the design, materials and specifications may be made without notice to customers.